Detection, diagnosis, and compensation of friction in control valves

Tore Hägglund

Department of Automatic Control
Lund University
Sweden

The automation trend

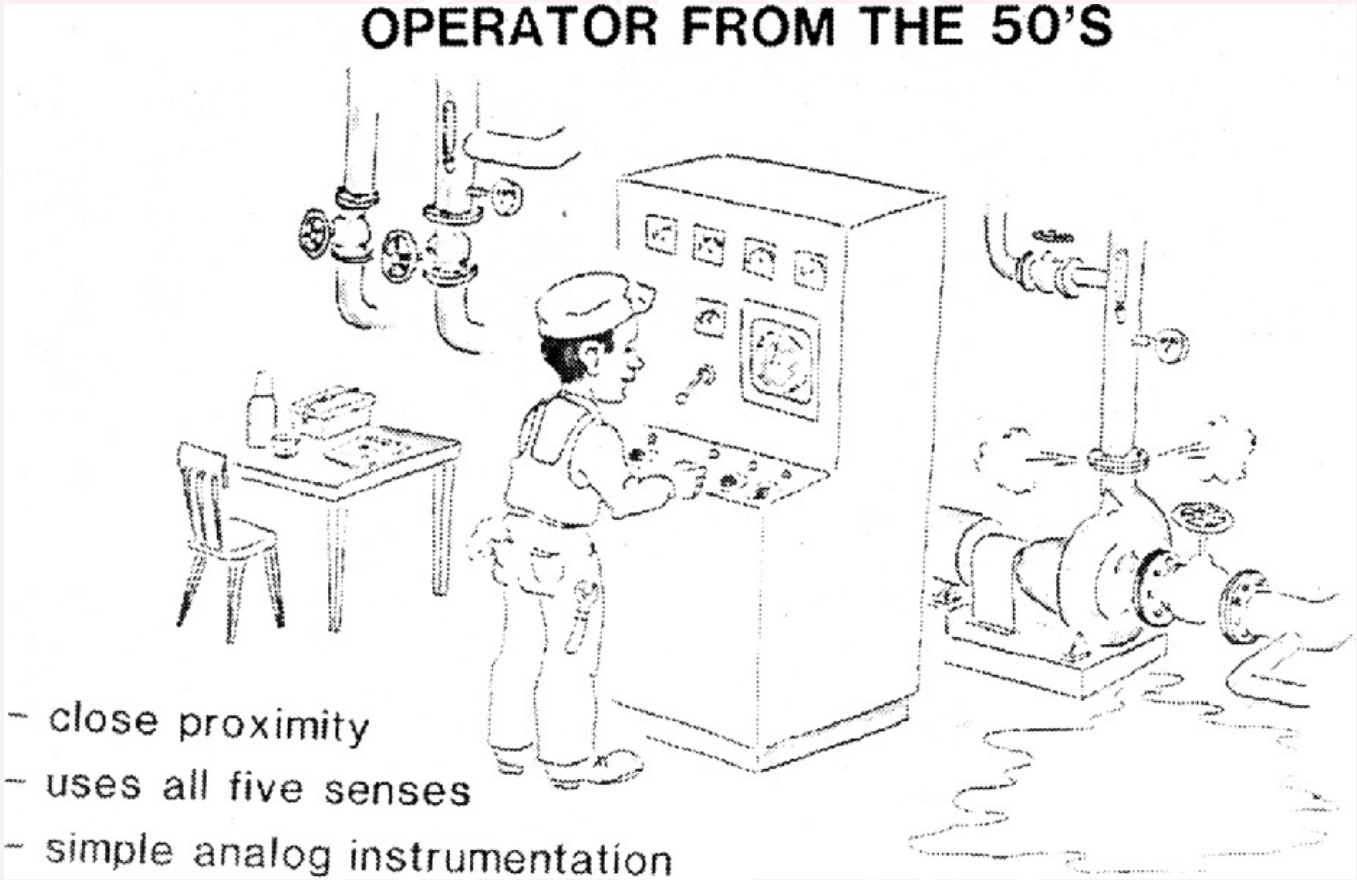

The automation trend

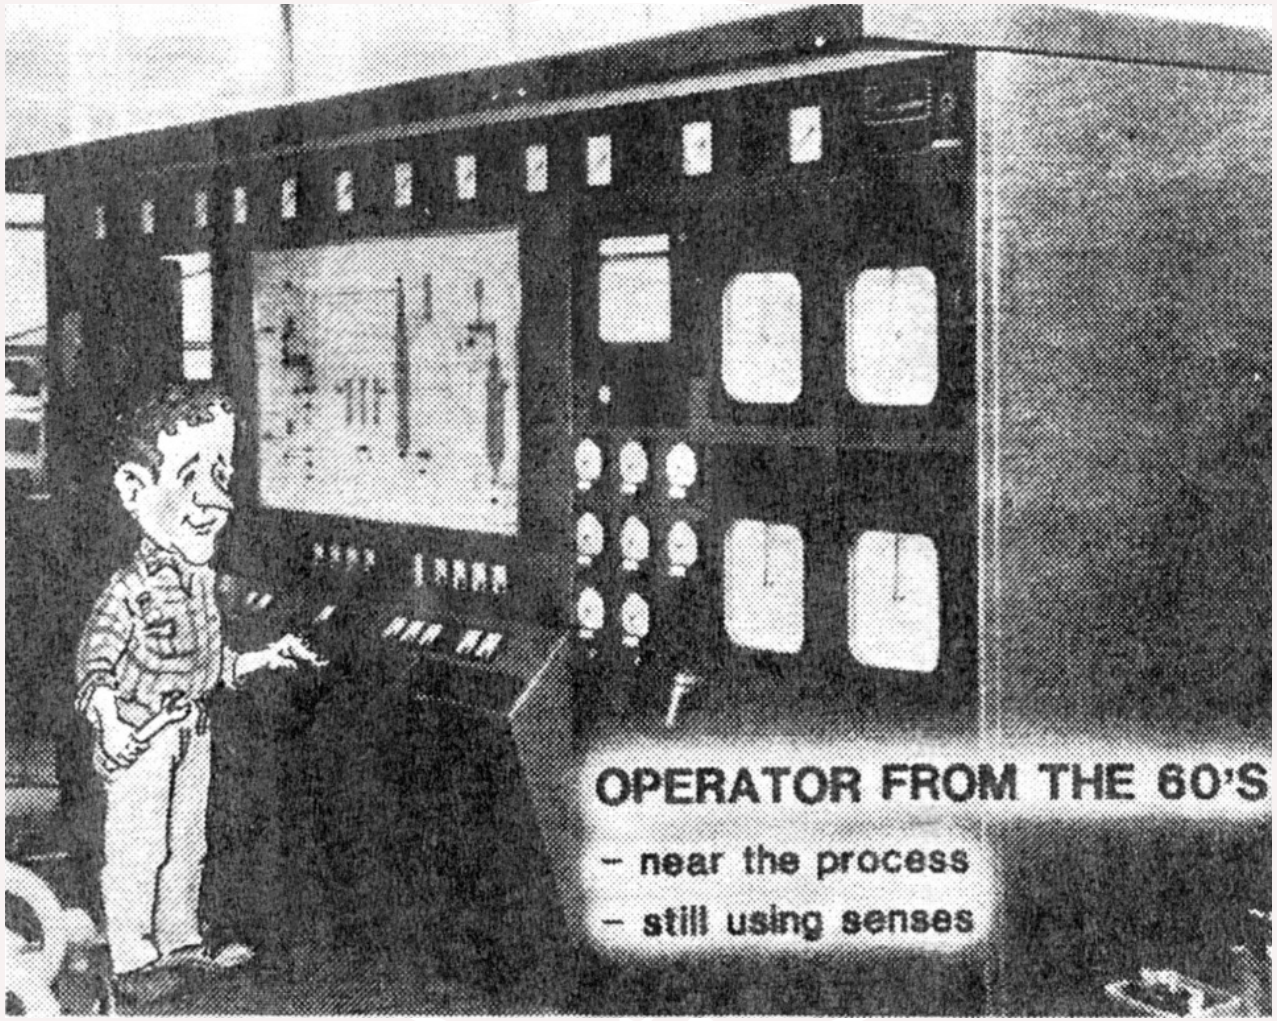

The automation trend

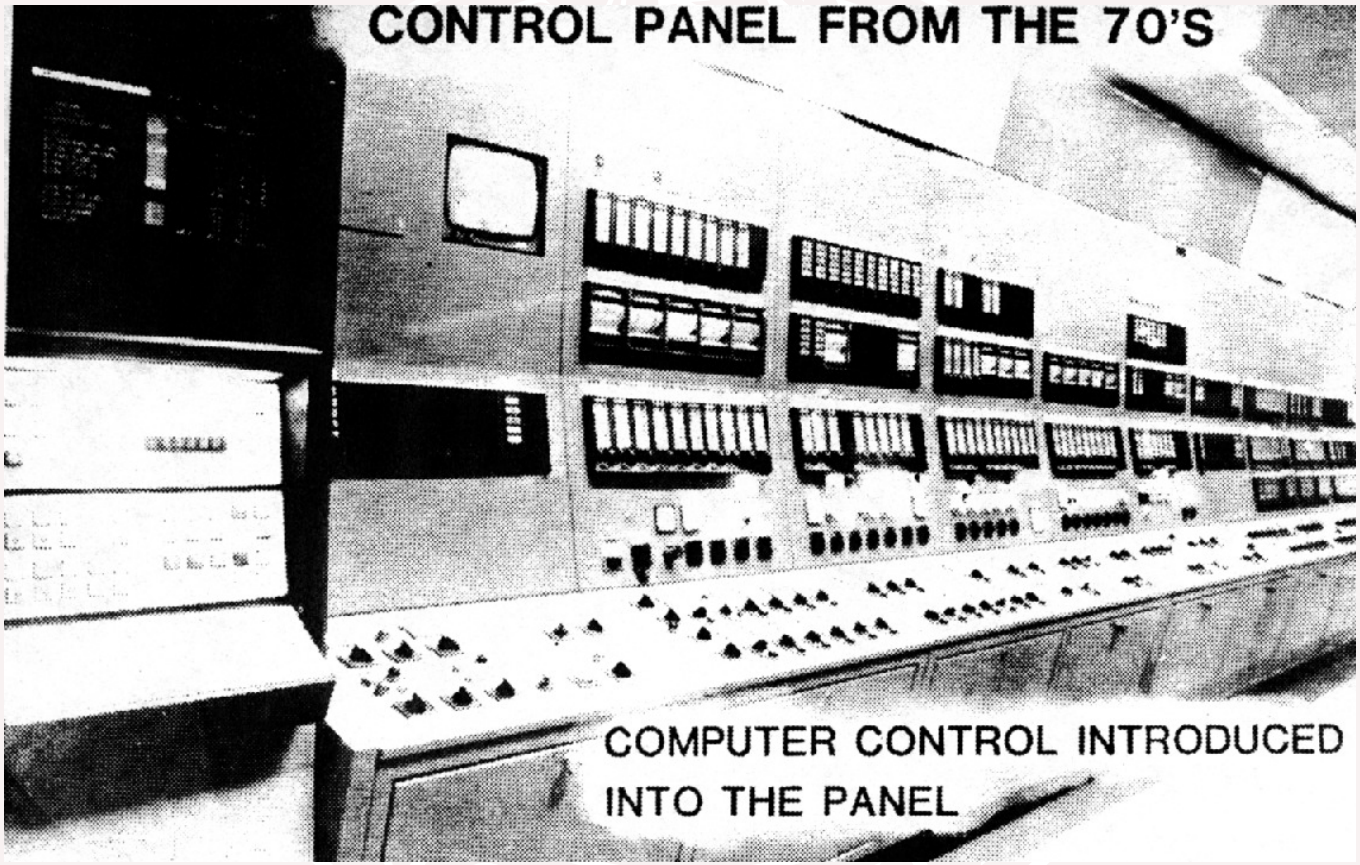

The automation trend

The automation trend

- Fewer operators
- More to supervise
- Control rooms $\Rightarrow$ sight, hearing, smelling are not used anymore
- More complicated processes
- Higher quality demands

Automatic performance monitoring

- We have improved process control.
- We have lost human performance monitoring.
- We need automatic performance monitoring.

Reasons for poor control loop performance

- Equipment problems
  - Stiction in valves
  - Backlash in valves
  - Sensor faults
- Poor controller tuning
  - Never tuned?
  - Nonlinear plant
  - Time-varying plant
- Oscillating load disturbances

Stiction and backlash in control valves

Paper-mill audit: About 30% of all control loops suffer from these problems.

“The single most important cause of process variability in process control.”

The control valve

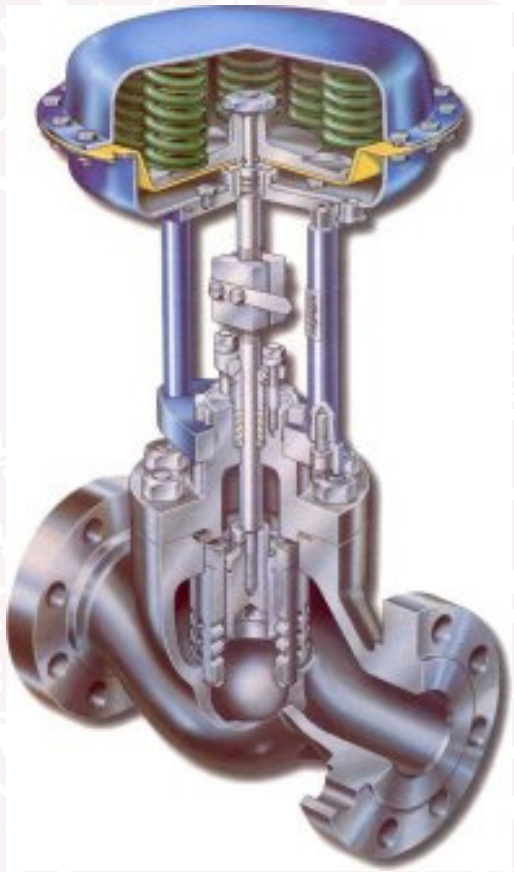

The control valve

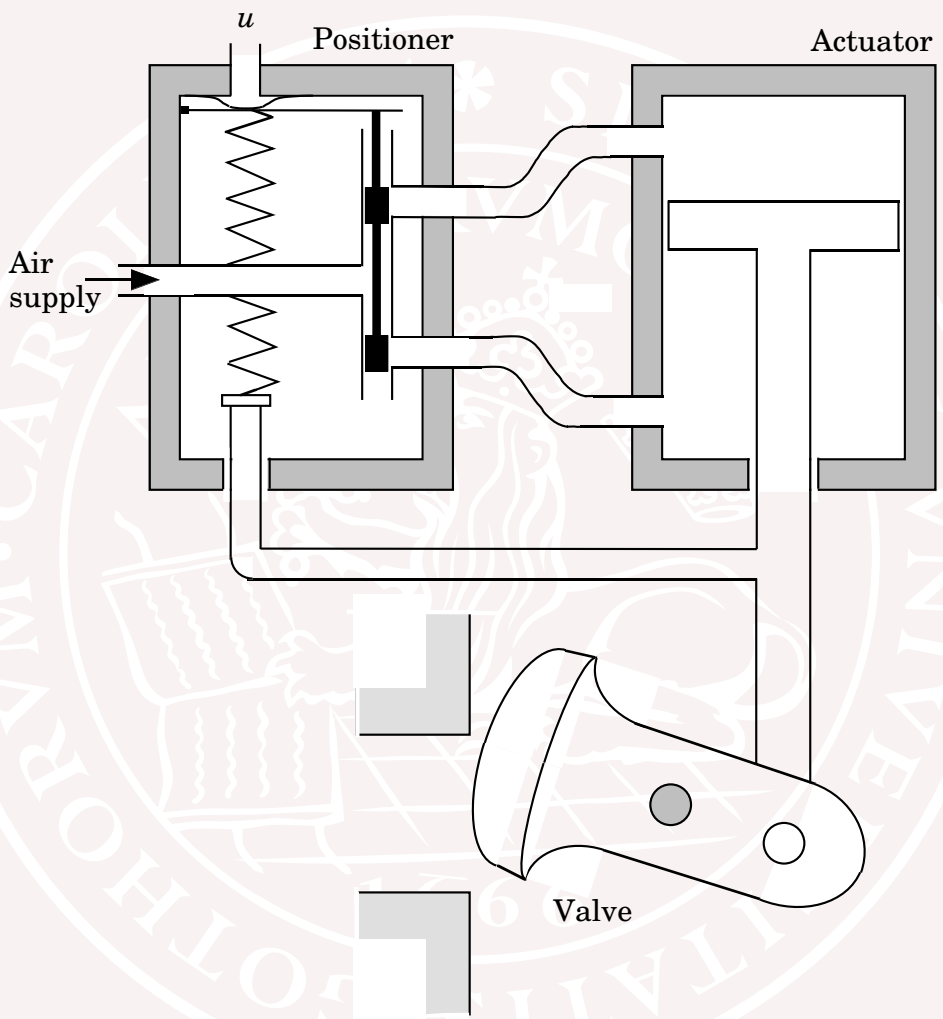

The control valve

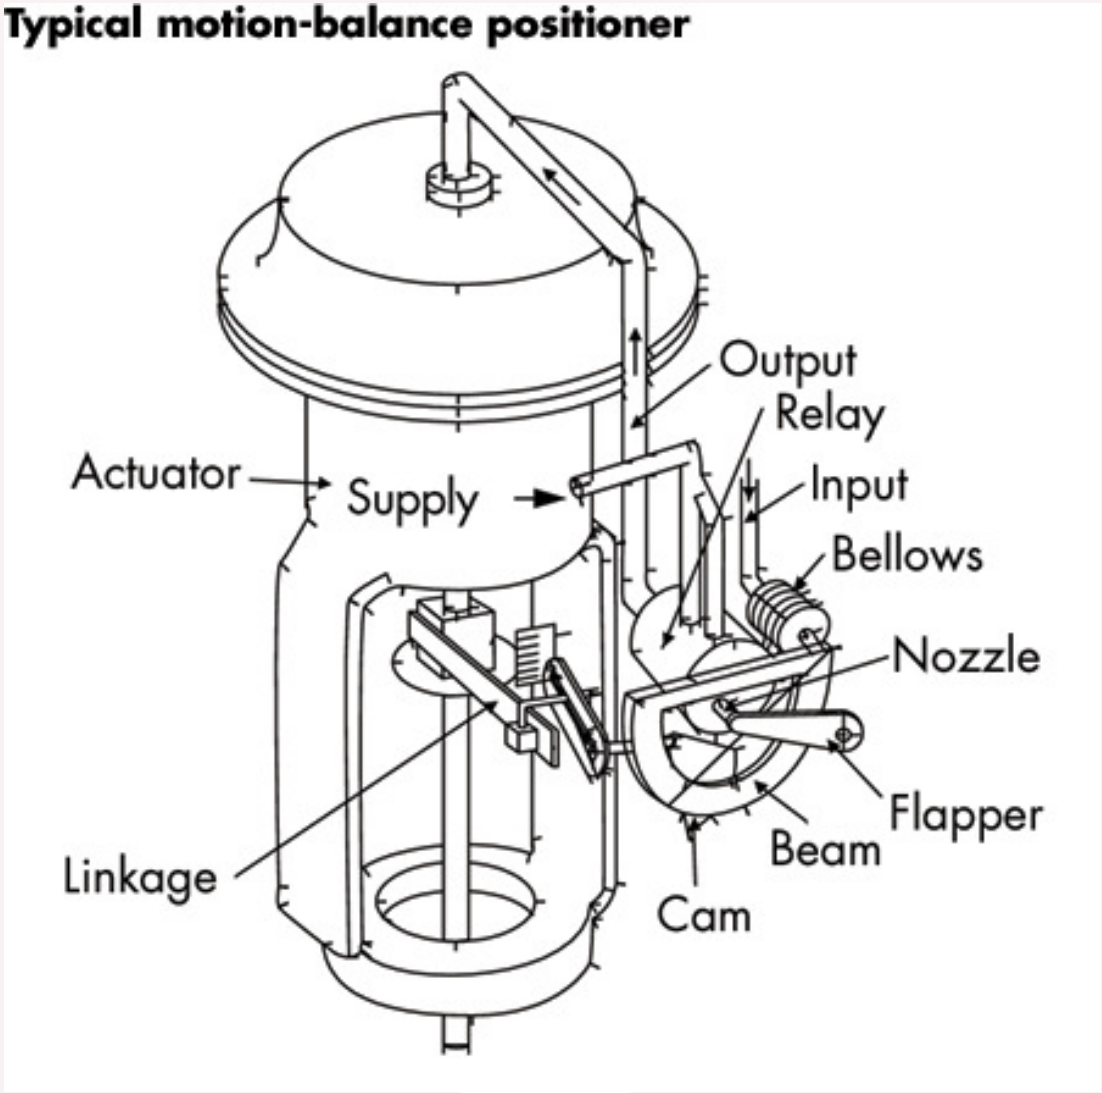

Friction in valves

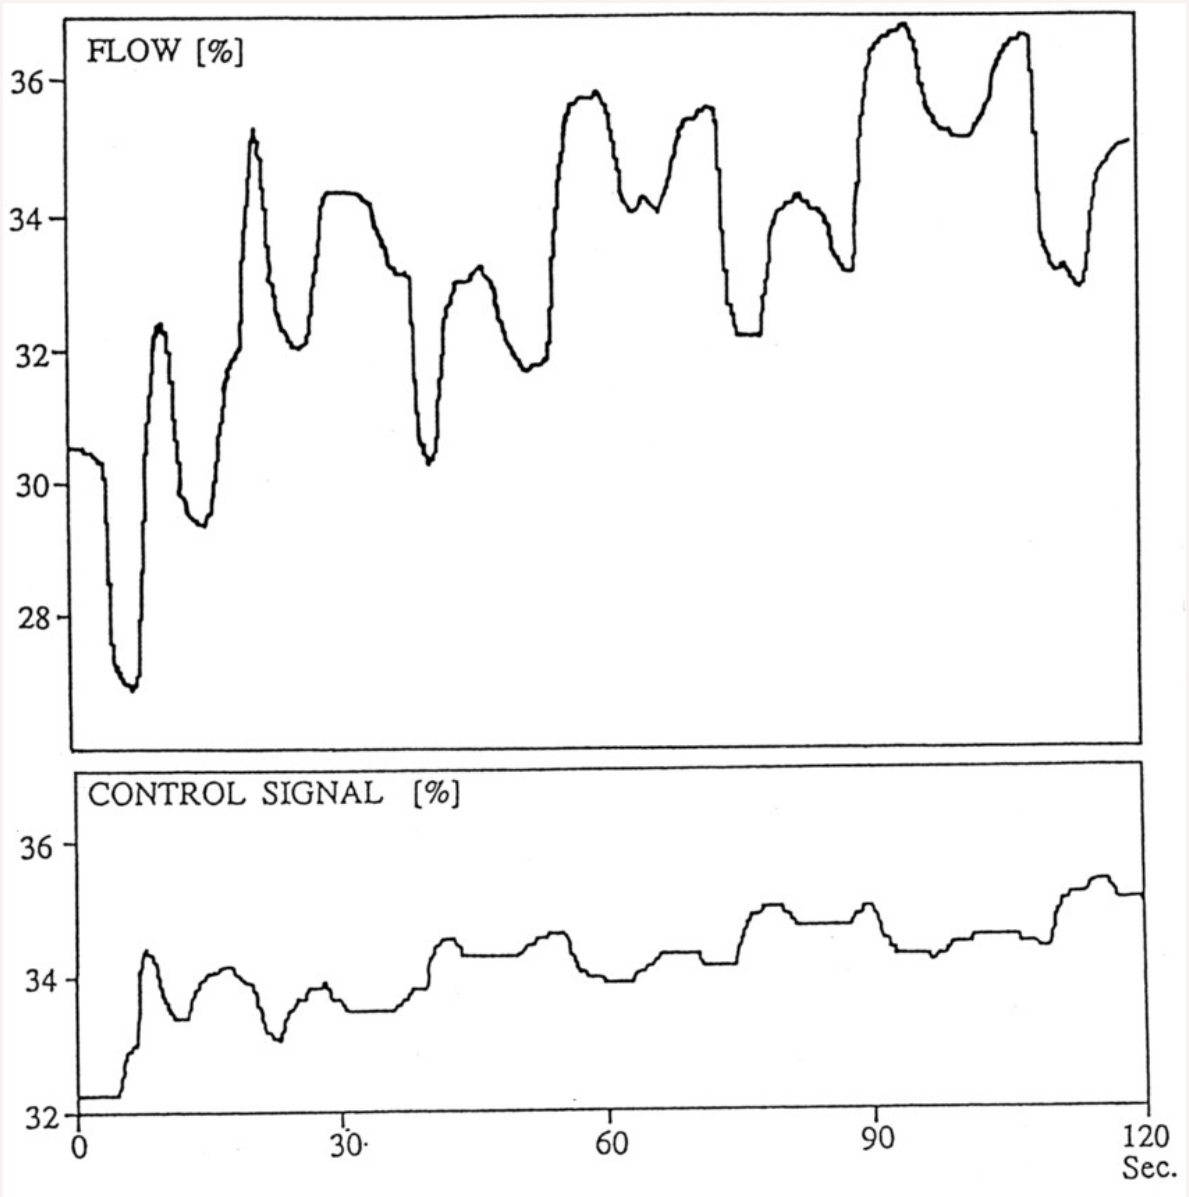

Friction in valves

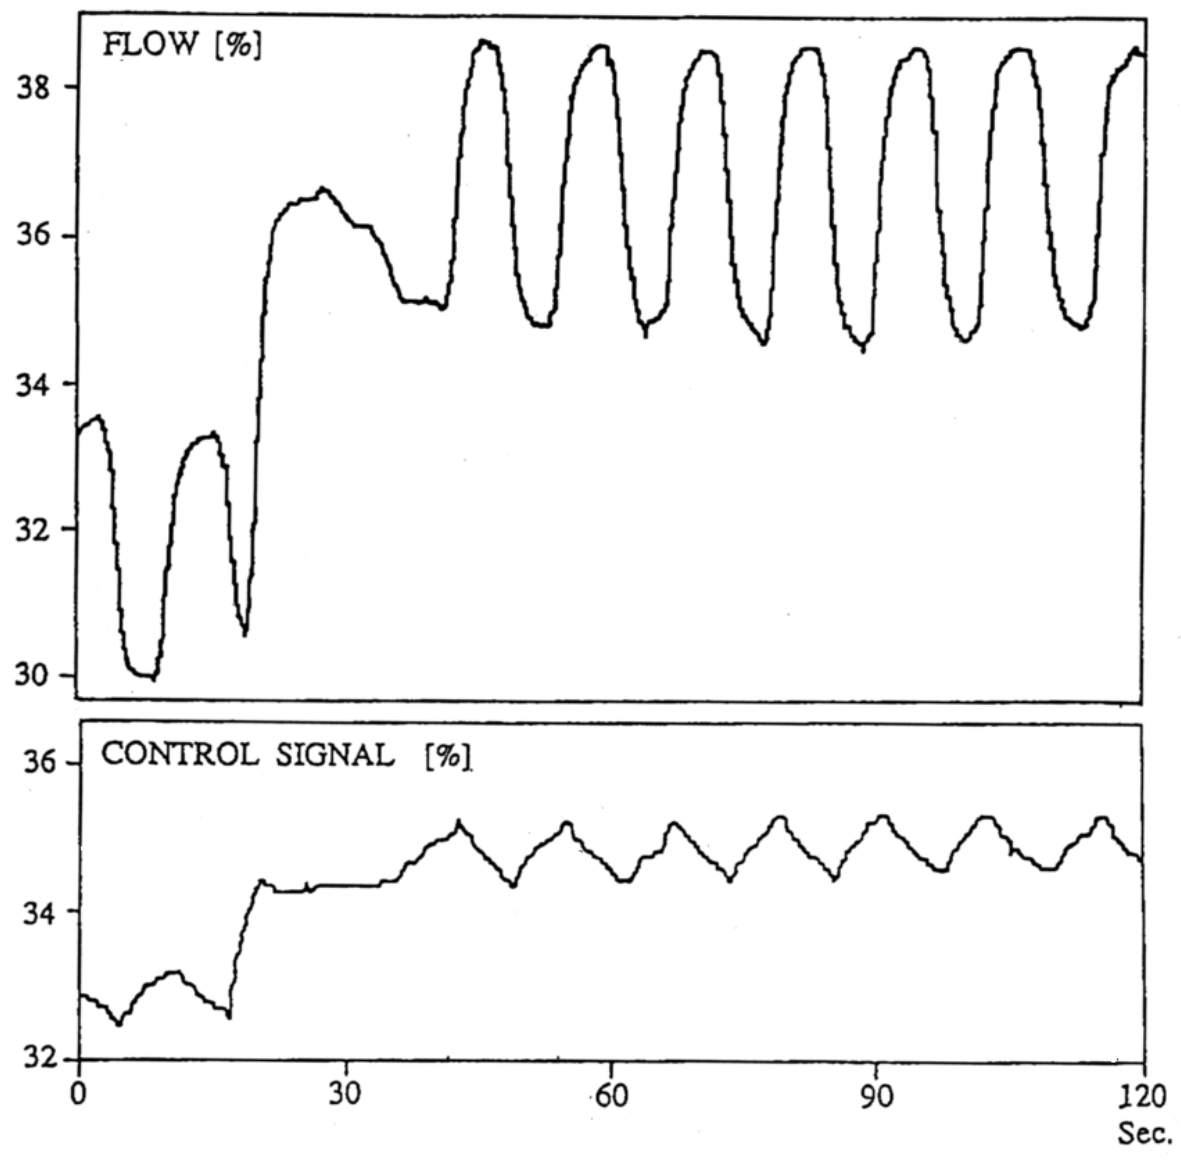

Diagnosis of friction

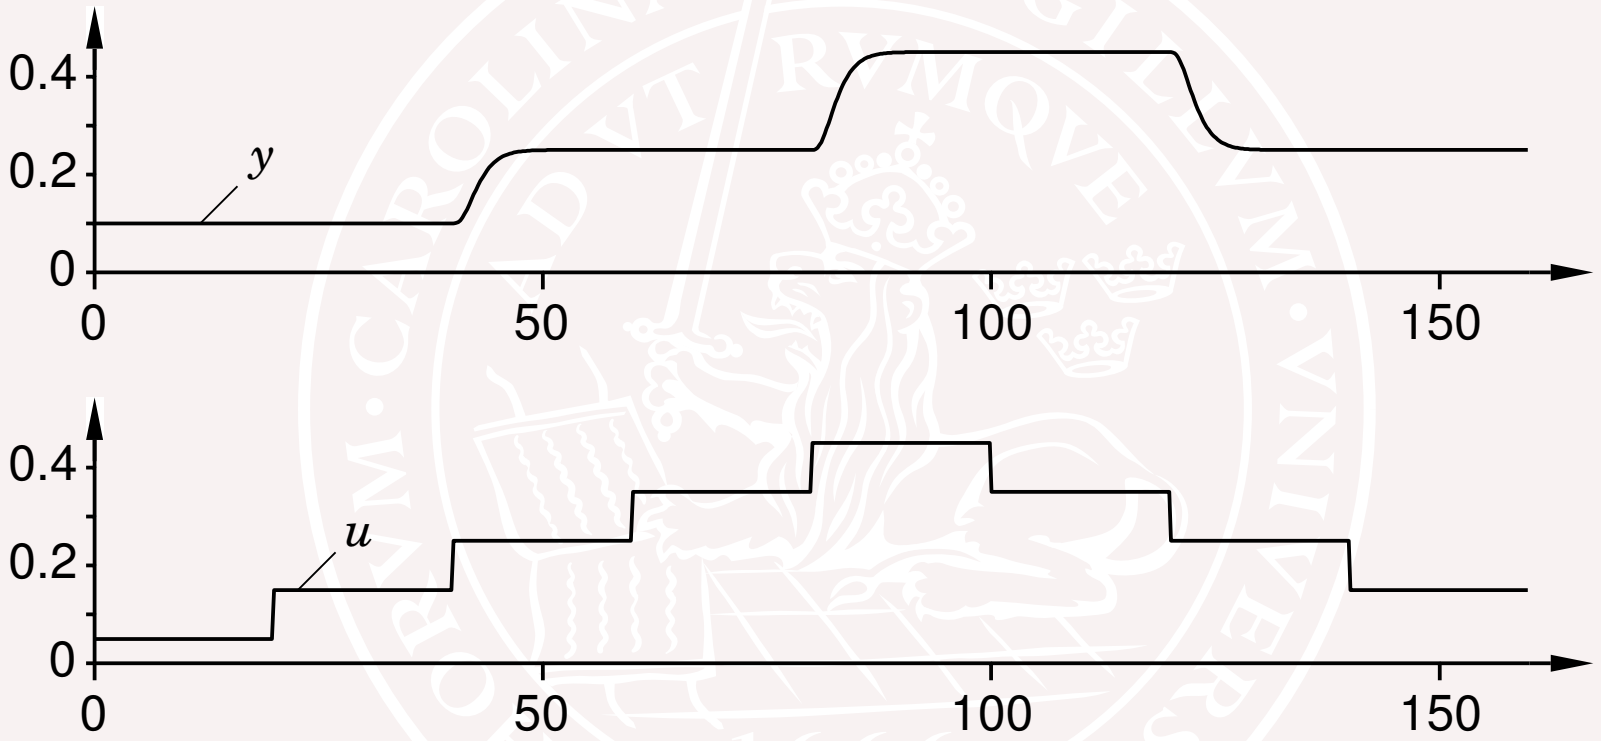

Diagnosis of backlash

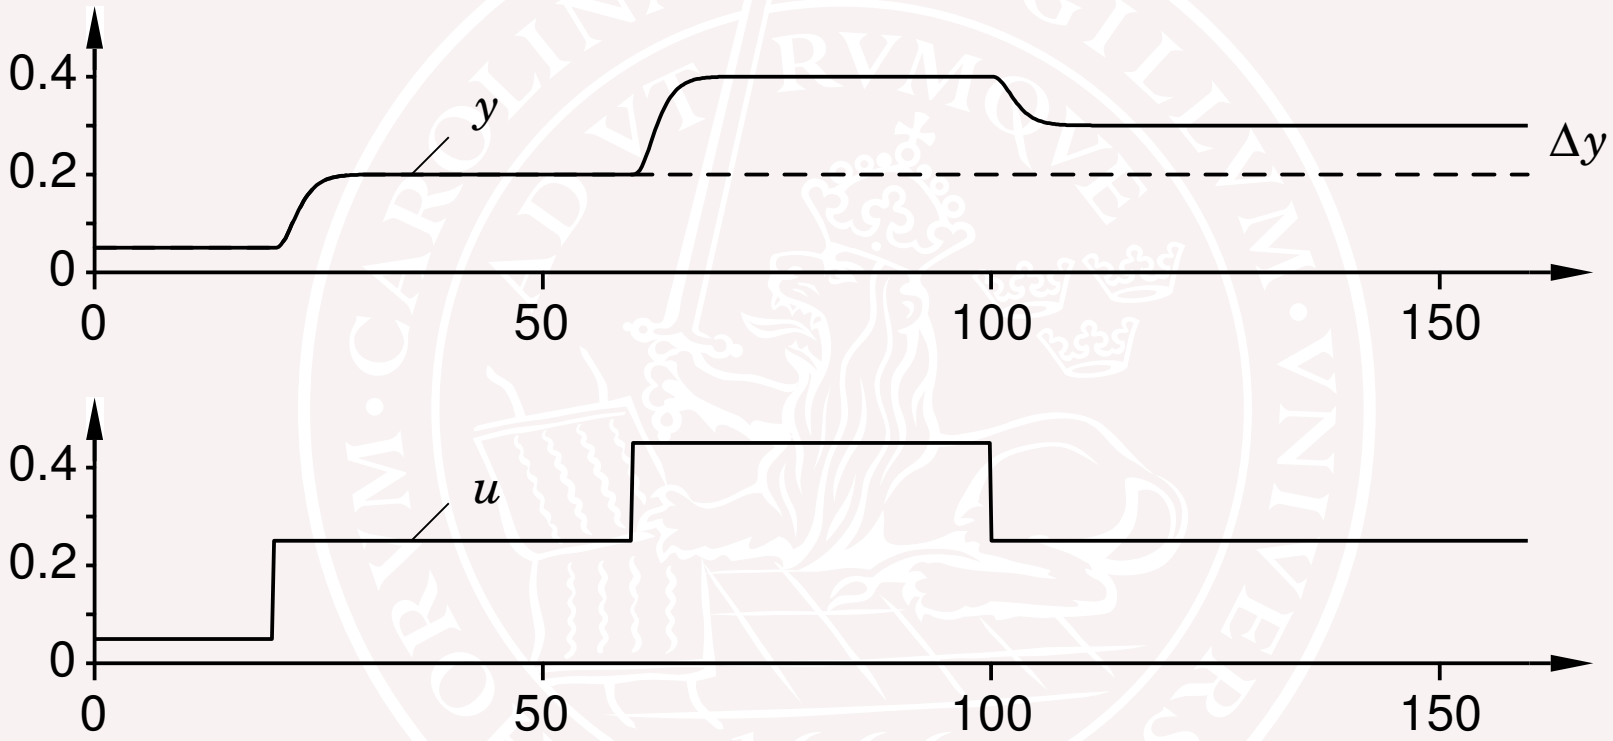

Oscillation detection

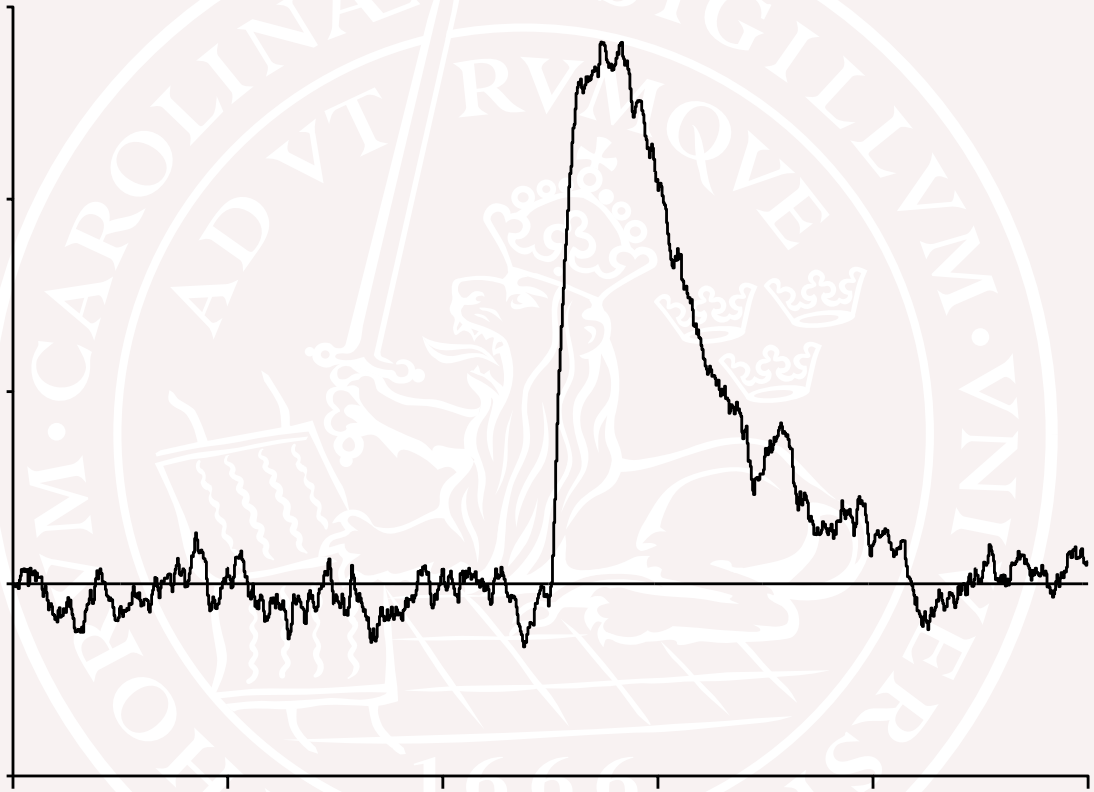

Oscillation detection

Determine

$$IAE = \int_{t_{i-1}}^{t_i} |e(t)|dt$$

between zero crossings of the control error.

Good control: IAE small

Load disturbances: IAE large

Oscillation detection

The loop is oscillating if the *rate* of load disturbances becomes high.

The loop is oscillating if more than n_{lim} load disturbances are detected during a supervision time T_{sup}.

3 parameters: IAE_{lim}, n_{lim}, T_{sup}.

Suggestion:

$$IAE_{lim} = T_i/\pi$$
$$n_{lim} = 10$$
$$T_{sup} = 50T_i$$

Example – Pulp concentration control

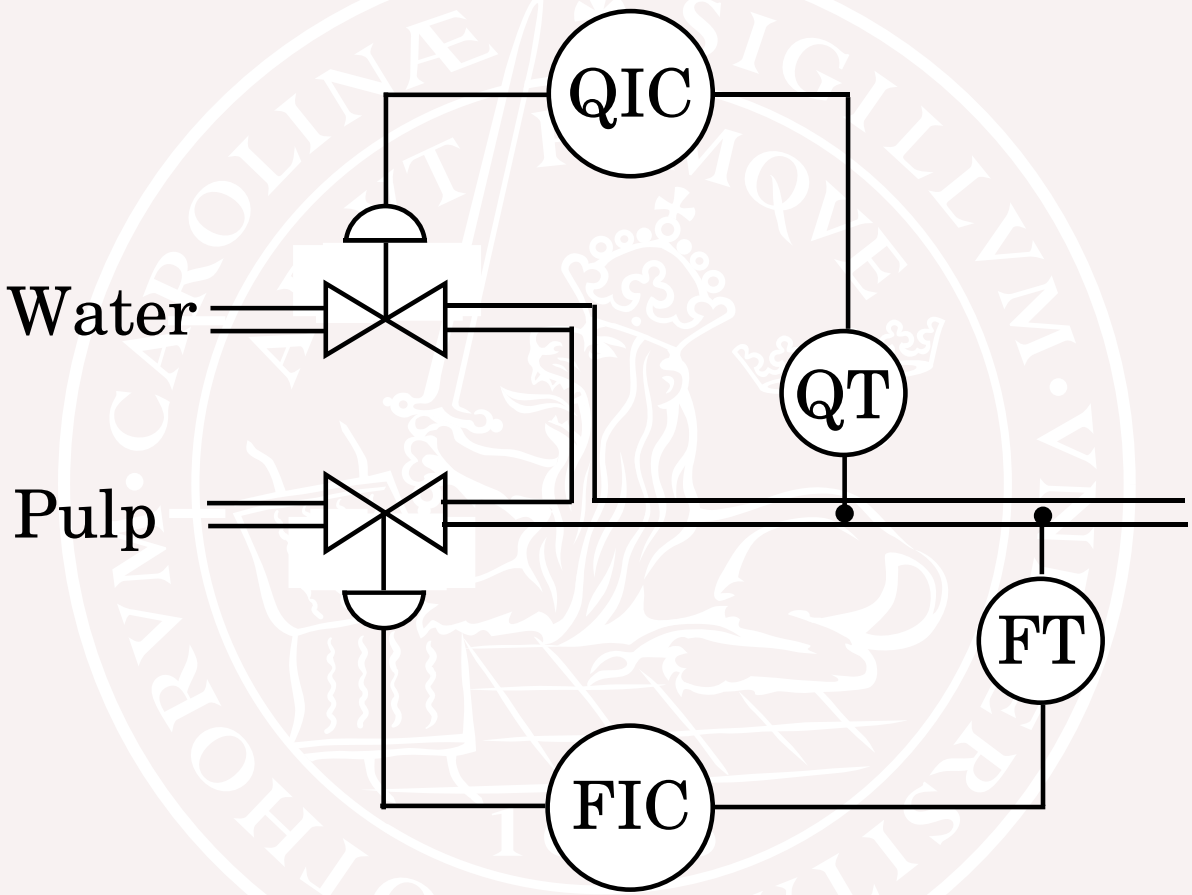

Example

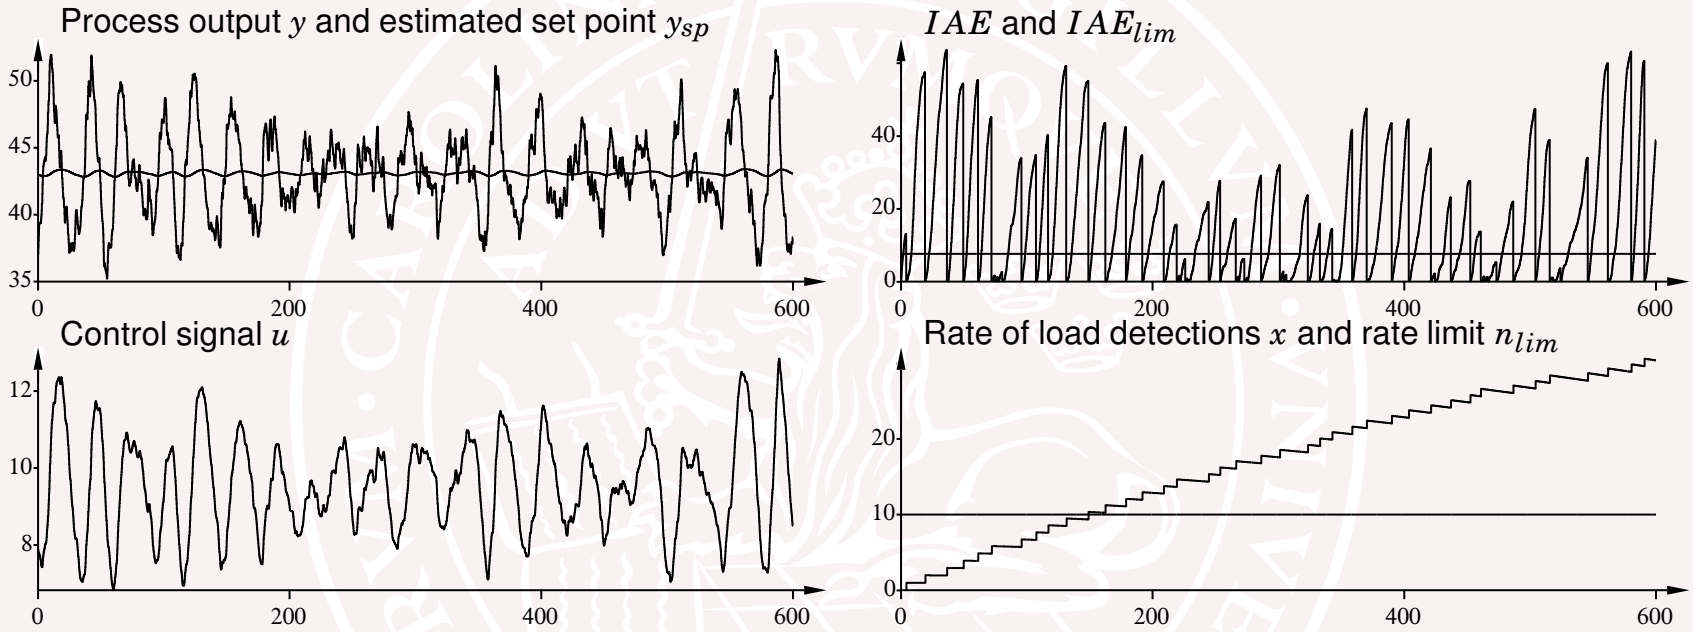
Process output y and estimated set point y_{sp}
50
45
40
35
0
200
400
600
IAE and IAE_{lim}
40
20
0
0
200
400
600
Control signal u
12
10
8
0
200
400
600
Rate of load detections x and rate limit n_{lim}
20
10
0
0
200
400
600

Diagnosis

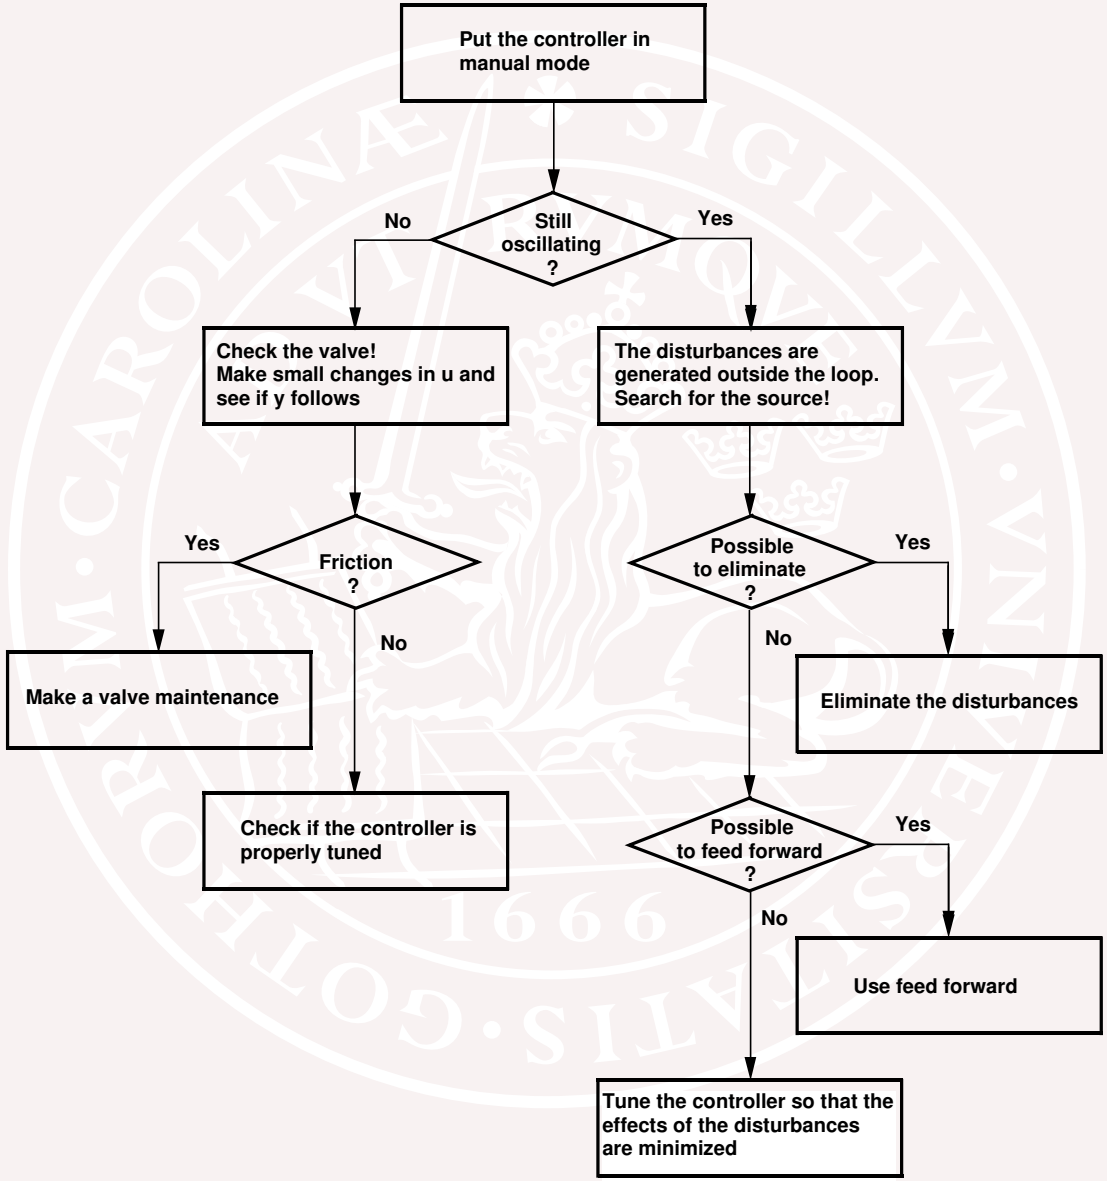
Put the controller in manual mode
Still oscillating ?
No
Yes
Check the valve! Make small changes in u and see if y follows
The disturbances are generated outside the loop. Search for the source!
Friction ?
Yes
No
Possible to eliminate ?
Yes
No
Make a valve maintenance
Eliminate the disturbances
Check if the controller is properly tuned
Possible to feed forward ?
Yes
No
Use feed forward
Tune the controller so that the effects of the disturbances are minimized

Frövi Paper Mill

Oscillation detection procedure used in Honeywell TDC3000.

91% of the loops in the carton board mill are supervised.

Each loop has an *Oscillation index* that is increased every time a detection is made.

The Oscillation index is reset to zero at maintenance or tuning.

Top-ten list presents the worst loops.

Frövi Paper Mill

Pressure control loop

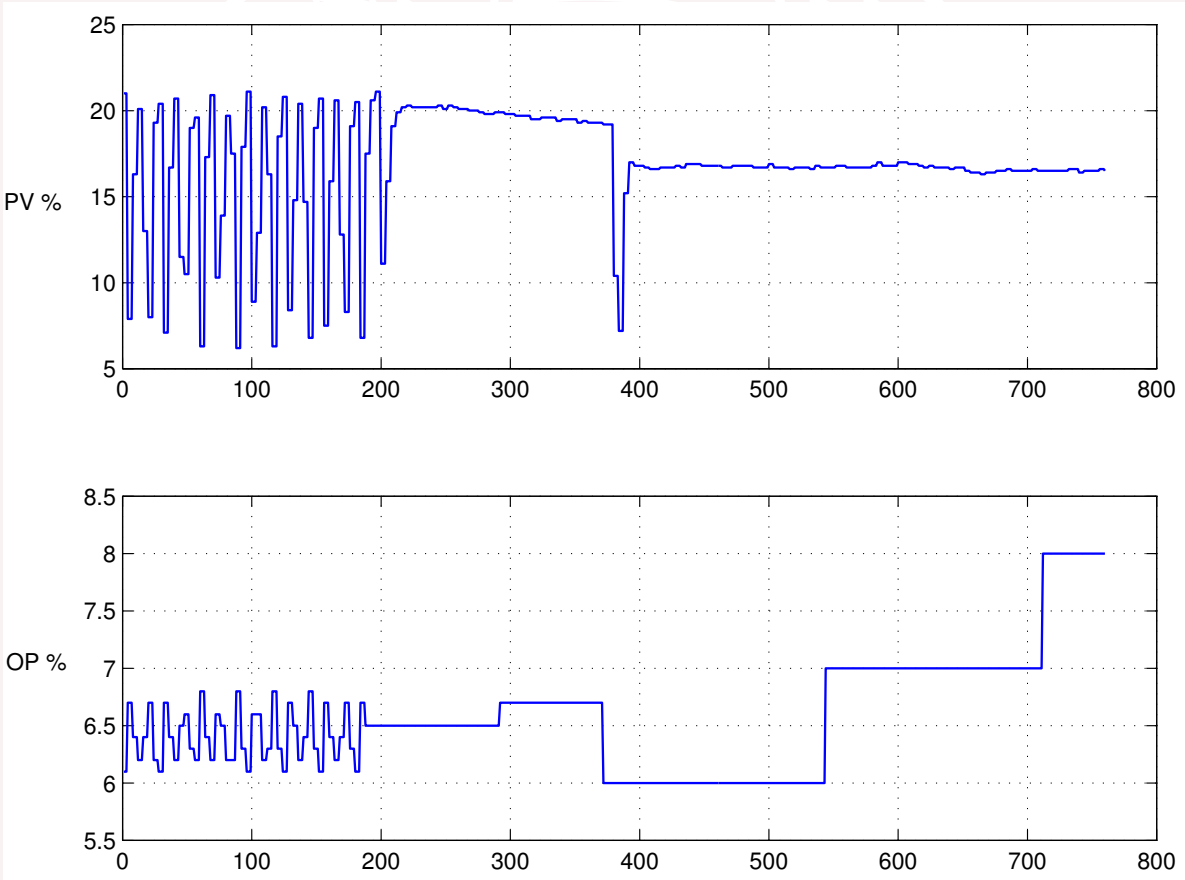

Frövi Paper Mill

Flow control loop

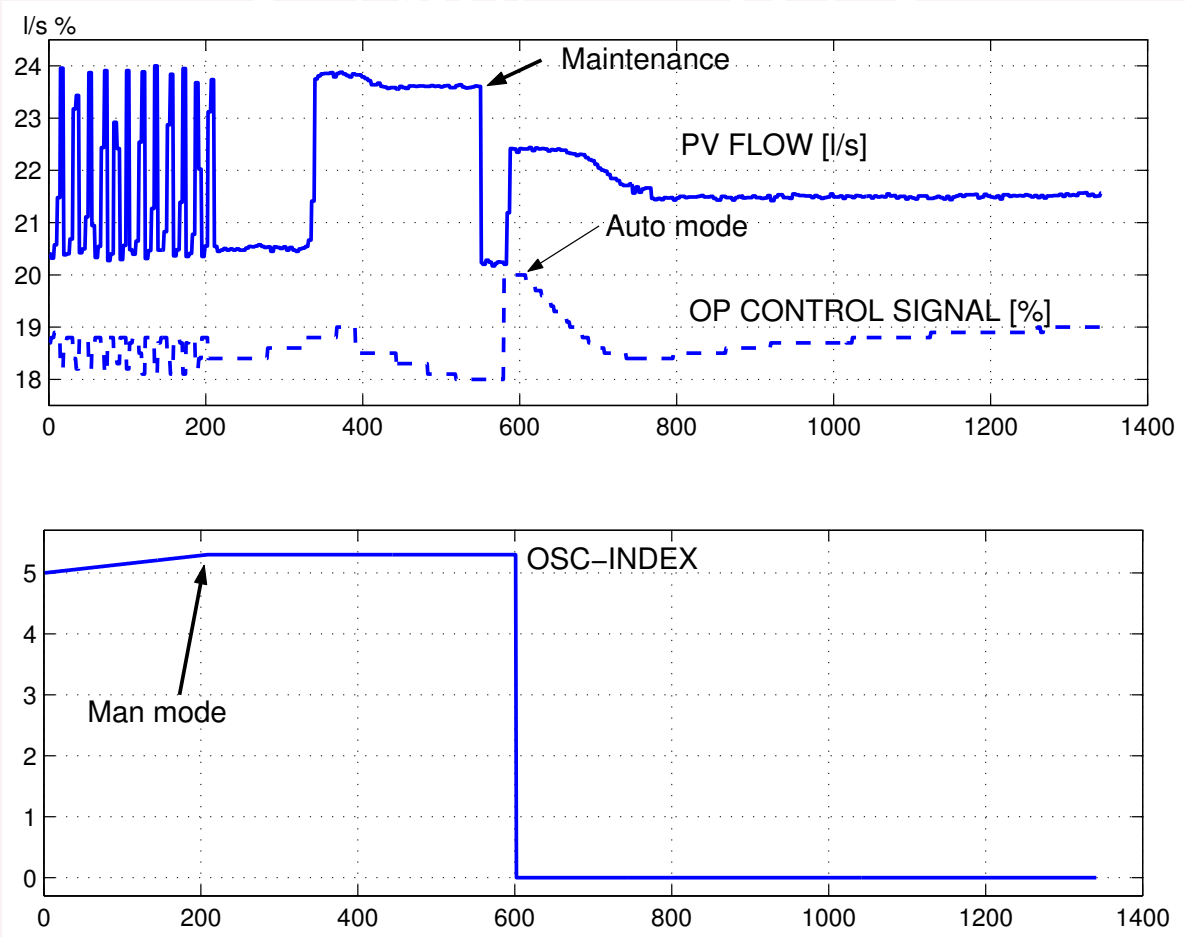

Stiction diagnosis

Recirculation flow loop in distillation column:

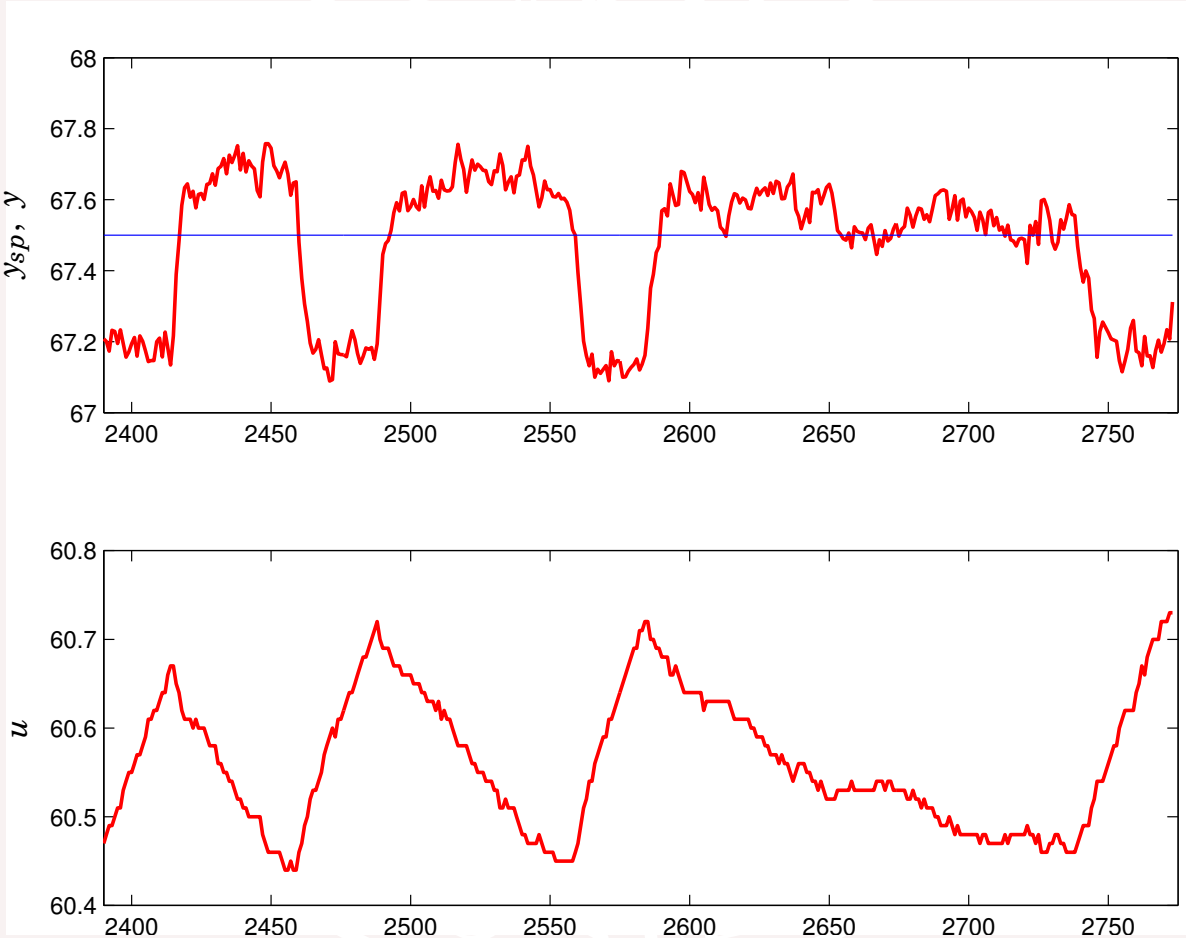

Idea: See if it is a square wave!

Stiction diagnosis

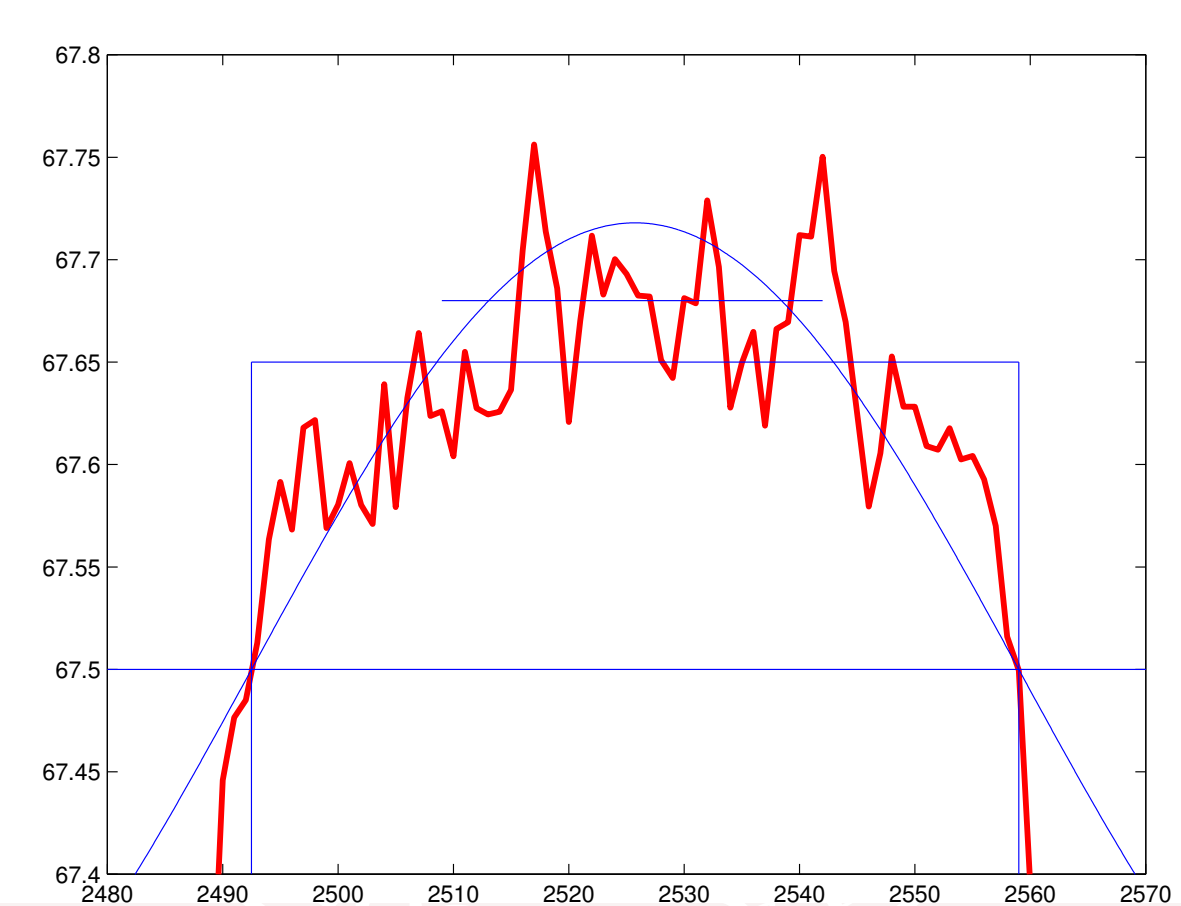

Sine wave

$$IAE = \int_{t_{c0}}^{t_{c1}} |e(t)| dt = \int_{0}^{\frac{T_p}{2}} a_{\text{sine}} \sin\left(\frac{2\pi}{T_p} t\right) dt = \frac{a_{\text{sine}} T_p}{\pi}.$$

$$a_{\text{sine}} = \frac{\pi \cdot IAE}{T_p}.$$

Square wave

$$IAE = \int_{t_{c0}}^{t_{c1}} |e(t)|dt = a_{\text{square}} \frac{T_p}{2},$$

$$a_{\text{square}} = \frac{2 \cdot IAE}{T_p}.$$

Sine or square wave?

$$V_{\text{sine}} = \sum_{i=1}^{n} \left(e(t_i) - a_{\text{sine}} \sin\left(\frac{2\pi}{T_p} ih \right) \right)^2$$

$$V_{\text{square}} = \sum_{i=1}^{n} \left(e(t_i) - a_{\text{square}} \right)^2 ,$$

Stiction index

$$I_{\text{stiction}} = \frac{V_{\text{sine}} - V_{\text{square}}}{V_{\text{sine}} + V_{\text{square}}}$$

$I_{\text{stiction}} > 0$ stiction

$I_{\text{stiction}} < 0$ no stiction

Stiction diagnosis – Example 1

Recirculation flow loop in distillation column: Stiction

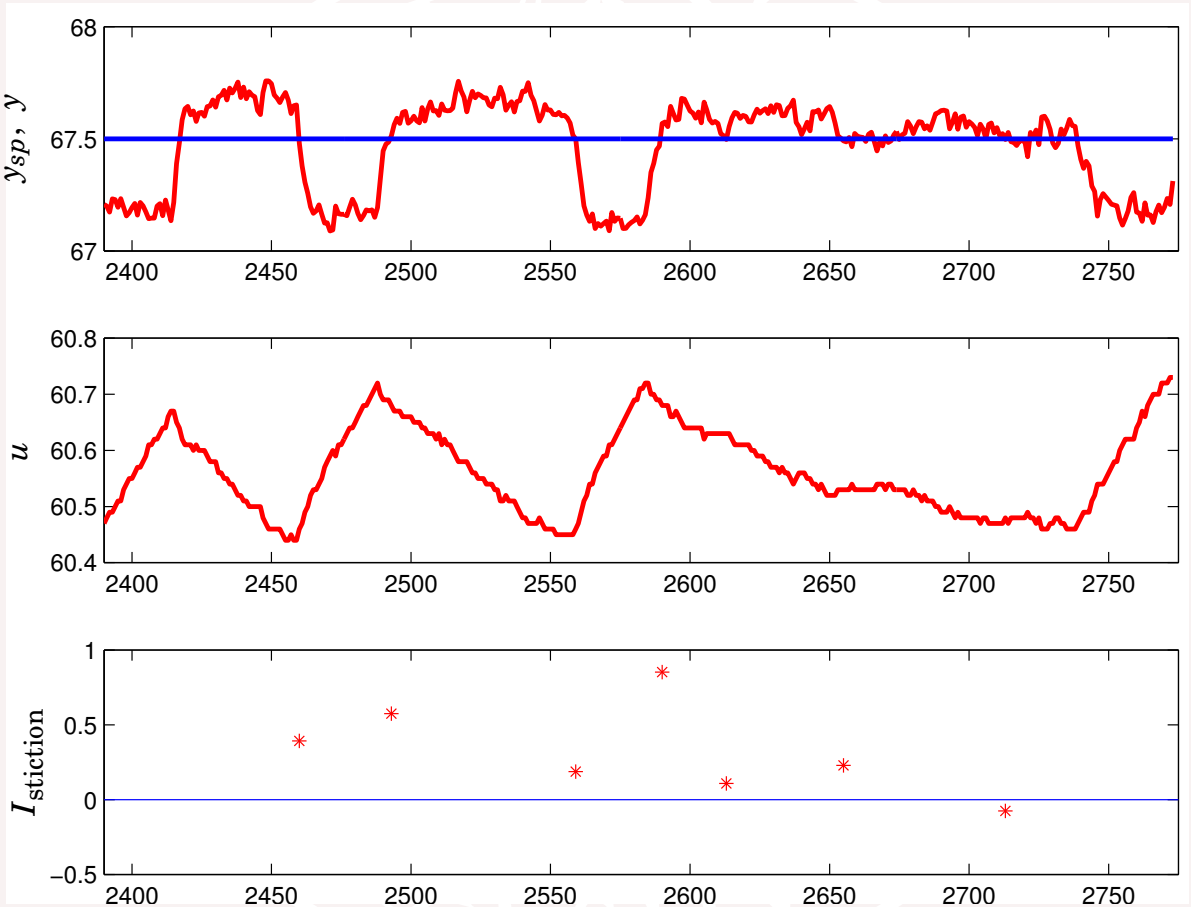

$$I_{\text{stiction}} = 0.32$$

Stiction diagnosis – Example 2

Recirculation flow loop in distillation column: Stiction

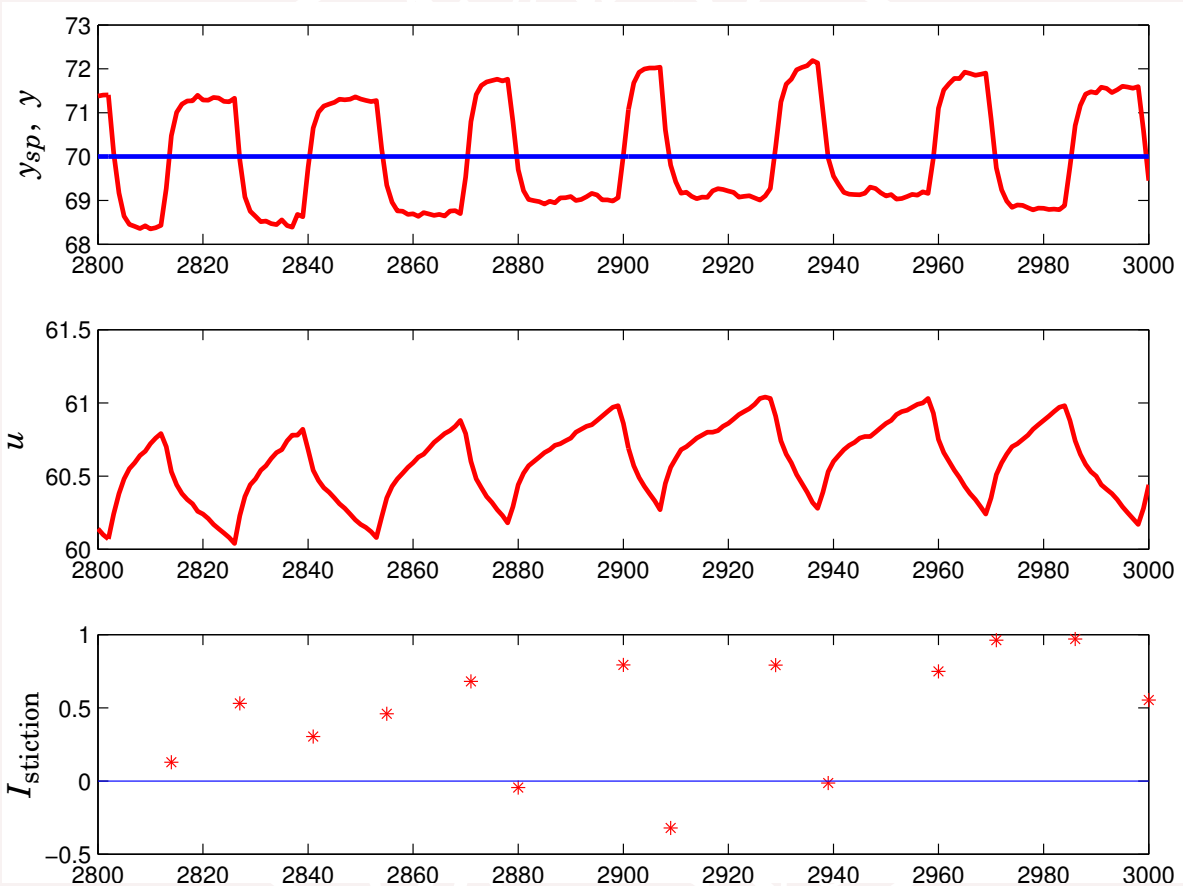

$$I_{\text{stiction}} = 0.47$$

Stiction diagnosis – Example 3

Level control loop in a paper mill: Badly tuned

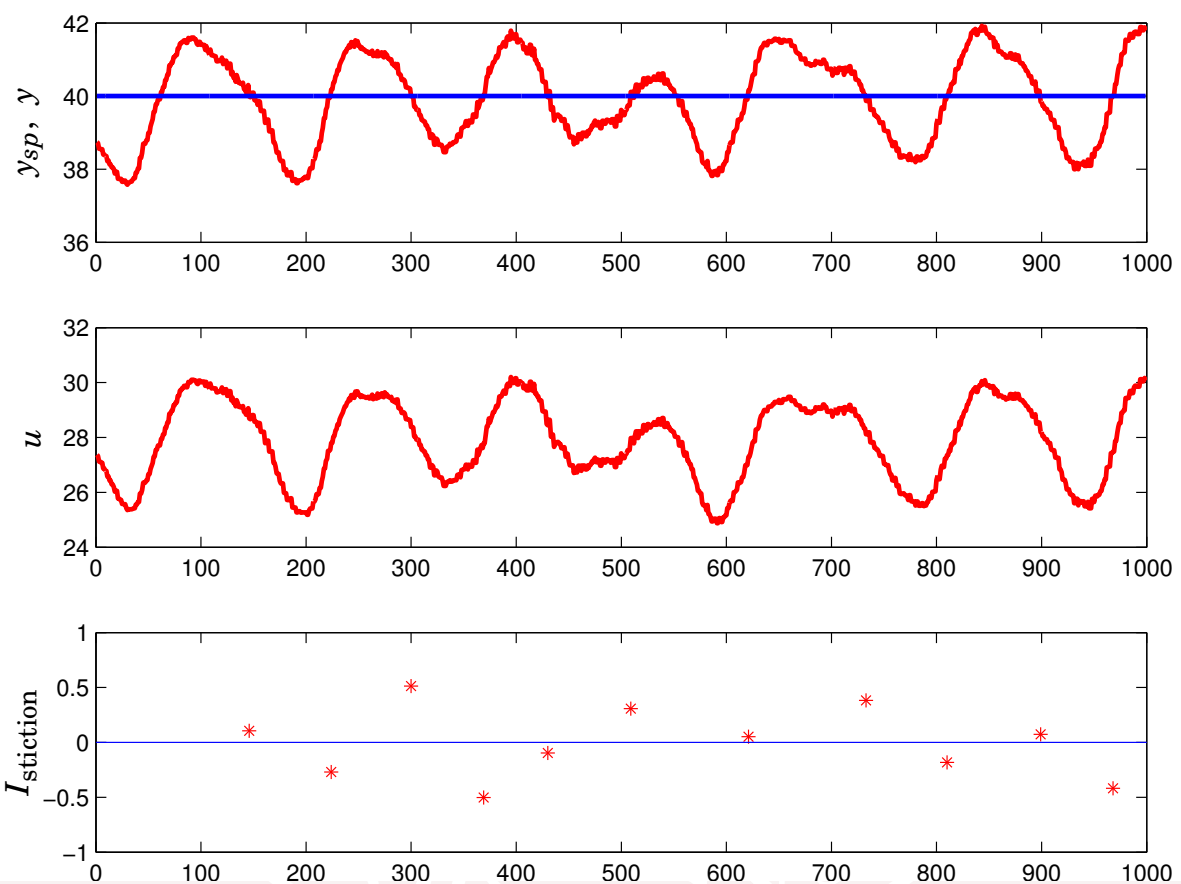

$$I_{\text{stiction}} = -0.0033$$

Stiction diagnosis – Example 4

Pulp flow in a paper mill: Stiction

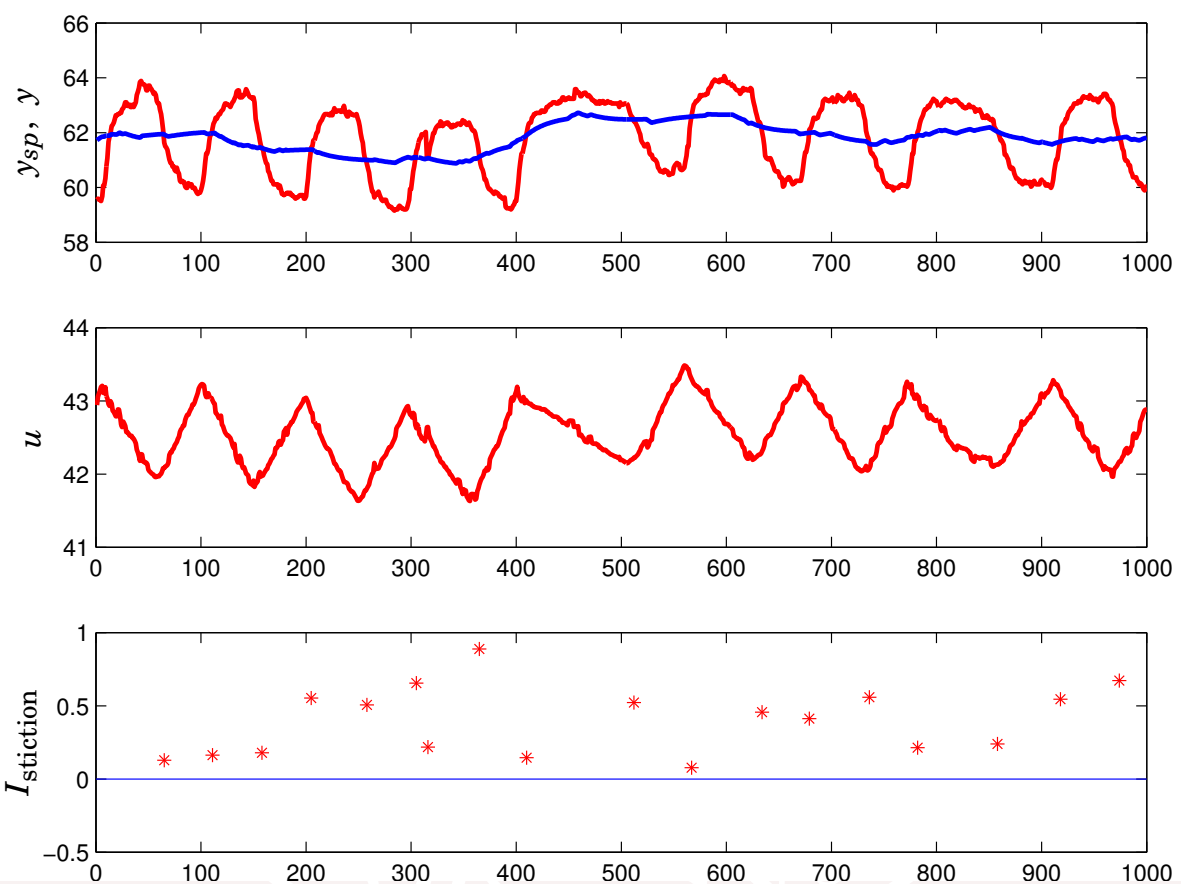

$$I_{\text{stiction}} = 0.40$$

Stiction diagnosis – Example 5

Pulp flow in a paper mill: Stiction

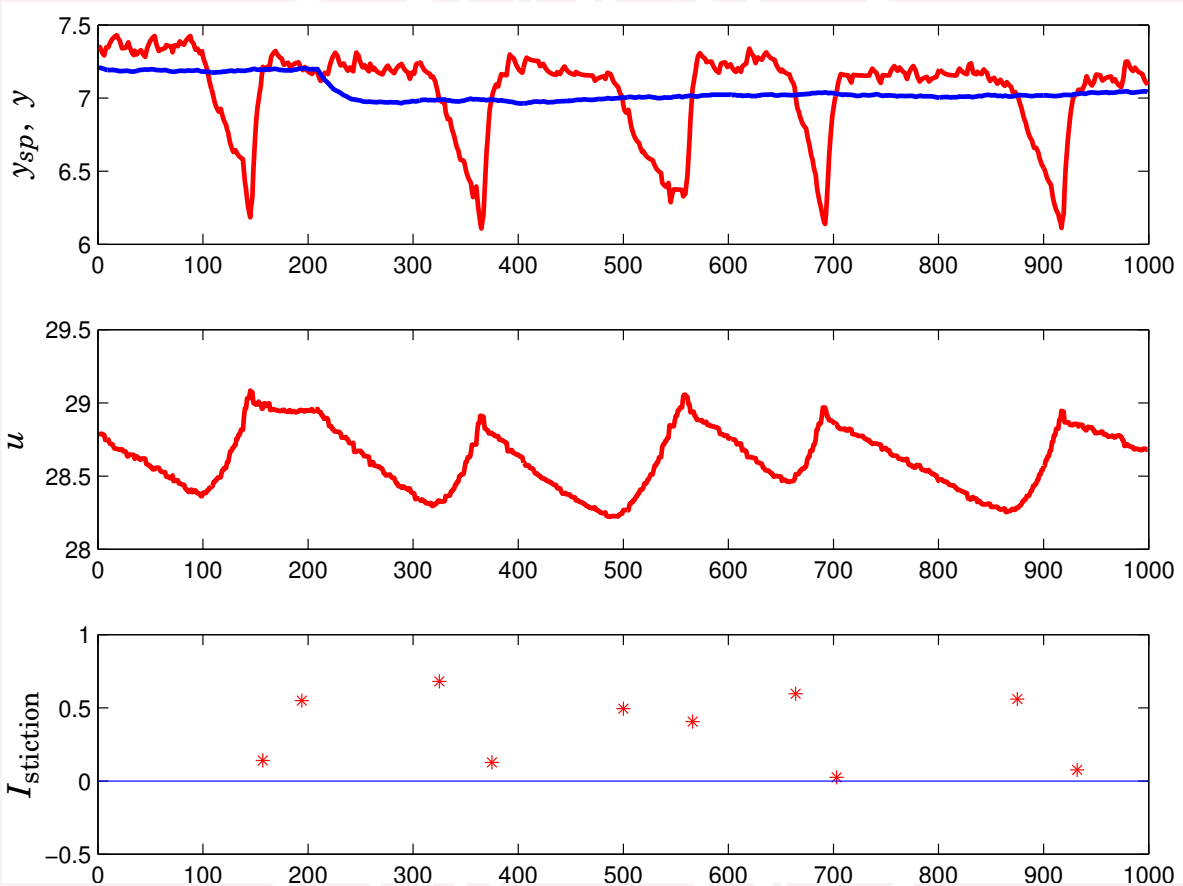

$$I_{\text{stiction}} = 0.37$$

Friction compensation

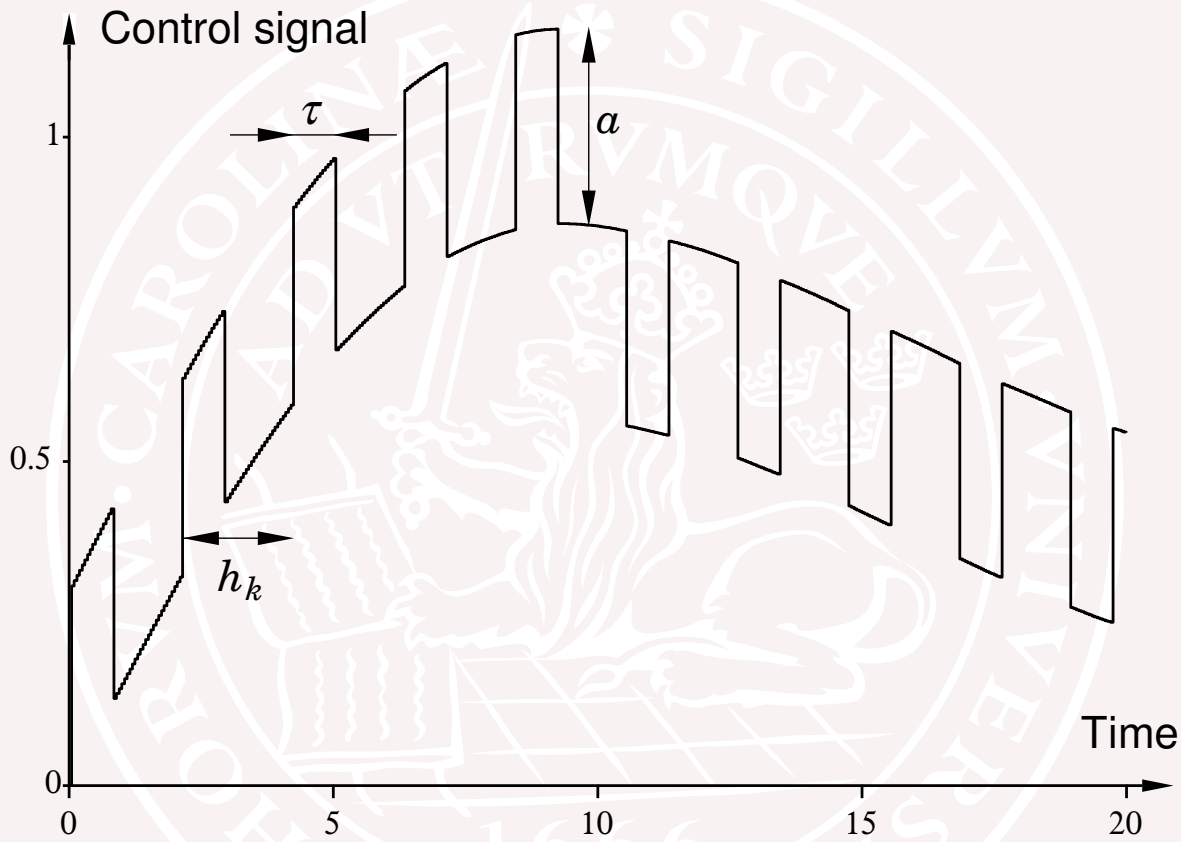

Add short pulses to the control signal in the direction of the rate-of change.

Control of a centrifuge in a sugar refinery

No knocker

Knocker

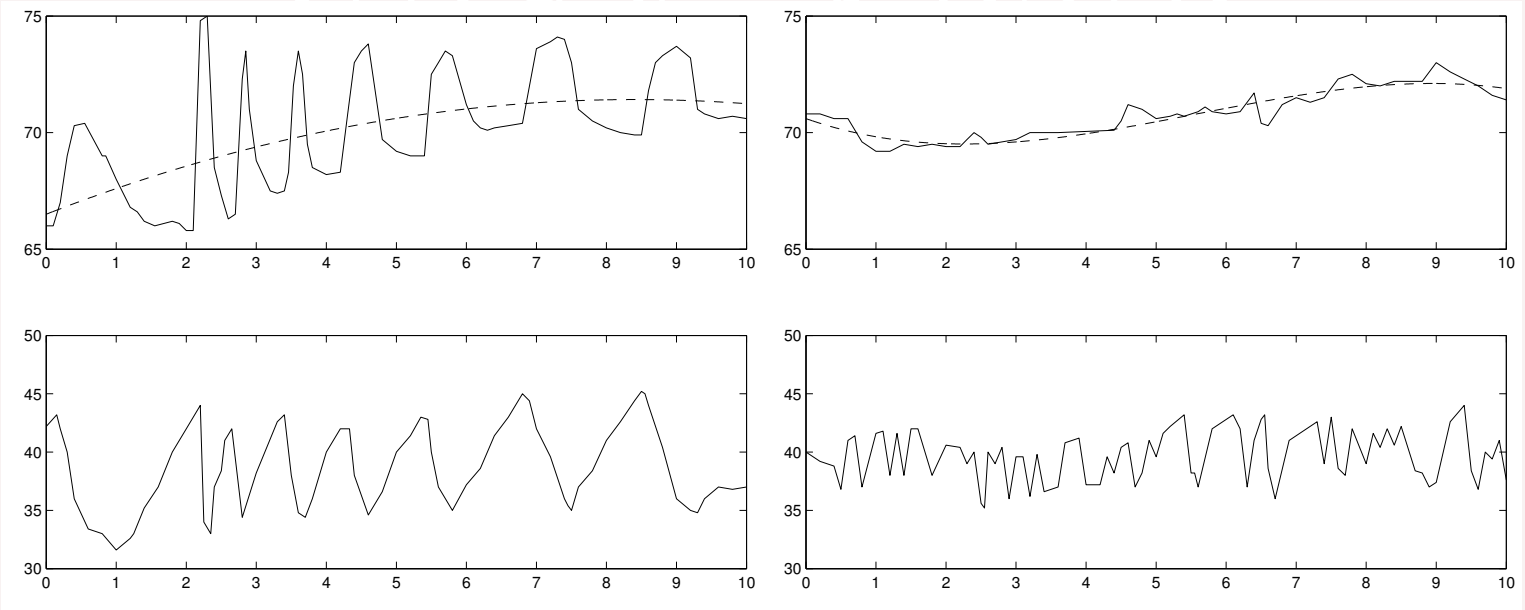

Summary

- The automation trend
- We must automize the supervision level
- Stiction and backlash major problems at loop level
- Often not discovered by personnel
- Three functions presented
- Implemented in ABB's 800 system

Future work

- Improve diagnosis of oscillations
- Try to isolate problems in larger process sections